

REPLACEMENT SHEET

4/15

50

Exit... Pane... Print... Report... Help

Users

| | | | | |
|---------------------|------------------|-----------------|--------------|--------|
| User ID: | 9999999999999999 | Phone: | 555-555-5555 | New |
| Last Name: | Smith | Dept #: | 26 | Save |
| First Name: | John | SSN: | 123456789 | Remove |
| Title: | Manager | | | Find |
| Location: | HEAD OFFICES | | | Delete |
| KeyKeeper Password: | XXXXXXXX | Security Level: | 100 | Exit |
| Panel PIN: | 1234 | New PIN: | | |
| Card Data: | Site: 0 | Card: 0 | | |

Browse Users

FIG. 4

REPLACEMENT SHEET

6/15

60(1)

The screenshot displays a software application window titled "Panels". The window has a menu bar with "File", "Database", "View", "Reports", and "Help". Below the menu bar is a toolbar with various icons. The main area of the window is divided into tabs: "General", "Settings 1", "Settings 2", and "Relay". The "General" tab is currently selected. It contains several input fields and buttons. On the right side of the "General" tab, there are buttons for "New", "Save", "Delete", and "End". At the bottom of the window, there is a status bar that reads "Browse Panels - 1 - Test".

| General | | Settings 1 | Settings 2 | Relay |
|-----------------------|--------|--------------|--|--------------|
| Panel ID: | | Panel Name: | Test | |
| Location: | MASTER | | Add For Panel | |
| Install Date: | | Master Date: | <input type="radio"/> Yes <input checked="" type="radio"/> No | |
| Model: | | No. of Keys: | 10 | |
| Communication Details | | | | |
| Port No.: | 1 | Type: | | Time Offset: |
| | | | | Password: |
| Messages Sent: | 51 | Error Count: | 51 | Reset Count: |

FIG. 6

REPLACEMENT SHEET

8/15

60(2)

The screenshot shows a software window titled 'Panels' with a menu bar (File, Database, Edit, Reports, Help) and a toolbar with icons for Exit, Print, Copy, Paste, Find, and Help. The window has four tabs: General, Settings 1, Settings 2, and Settings. The 'Settings' tab is active, displaying two columns of settings: 'Timers' and 'Counter / Types'. The 'Timers' column includes fields for Authenticate Time (20), Keypad Lockout Time (15), Door Alarm Interval Time (10), Key Switch Debounce Time (100), Authenticate Control Mode (0), and Password Expiry time (23). The 'Counter / Types' column includes fields for Door Switch Type (Door On), Door Delay (3), Wrong Pin Count (2), and Auxiliary Port Mode (Print OK). On the right side of the window, there are buttons for New, Save, Delete, and Exit. At the bottom, there is a status bar showing '14 4' and 'Browse Panels - 1 - Text'.

| Timers | | Counter / Types | |
|---------------------------|-----|---------------------|----------|
| Authenticate Time | 20 | Door Switch Type | Door On |
| Keypad Lockout Time | 15 | Door Delay | 3 |
| Door Alarm Interval Time | 10 | Wrong Pin Count | 2 |
| Key Switch Debounce Time | 100 | Auxiliary Port Mode | Print OK |
| Authenticate Control Mode | 0 | | |
| Password Expiry time | 23 | | |

FIG. 8

REPLACEMENT SHEET

9/15

60(3)
↓

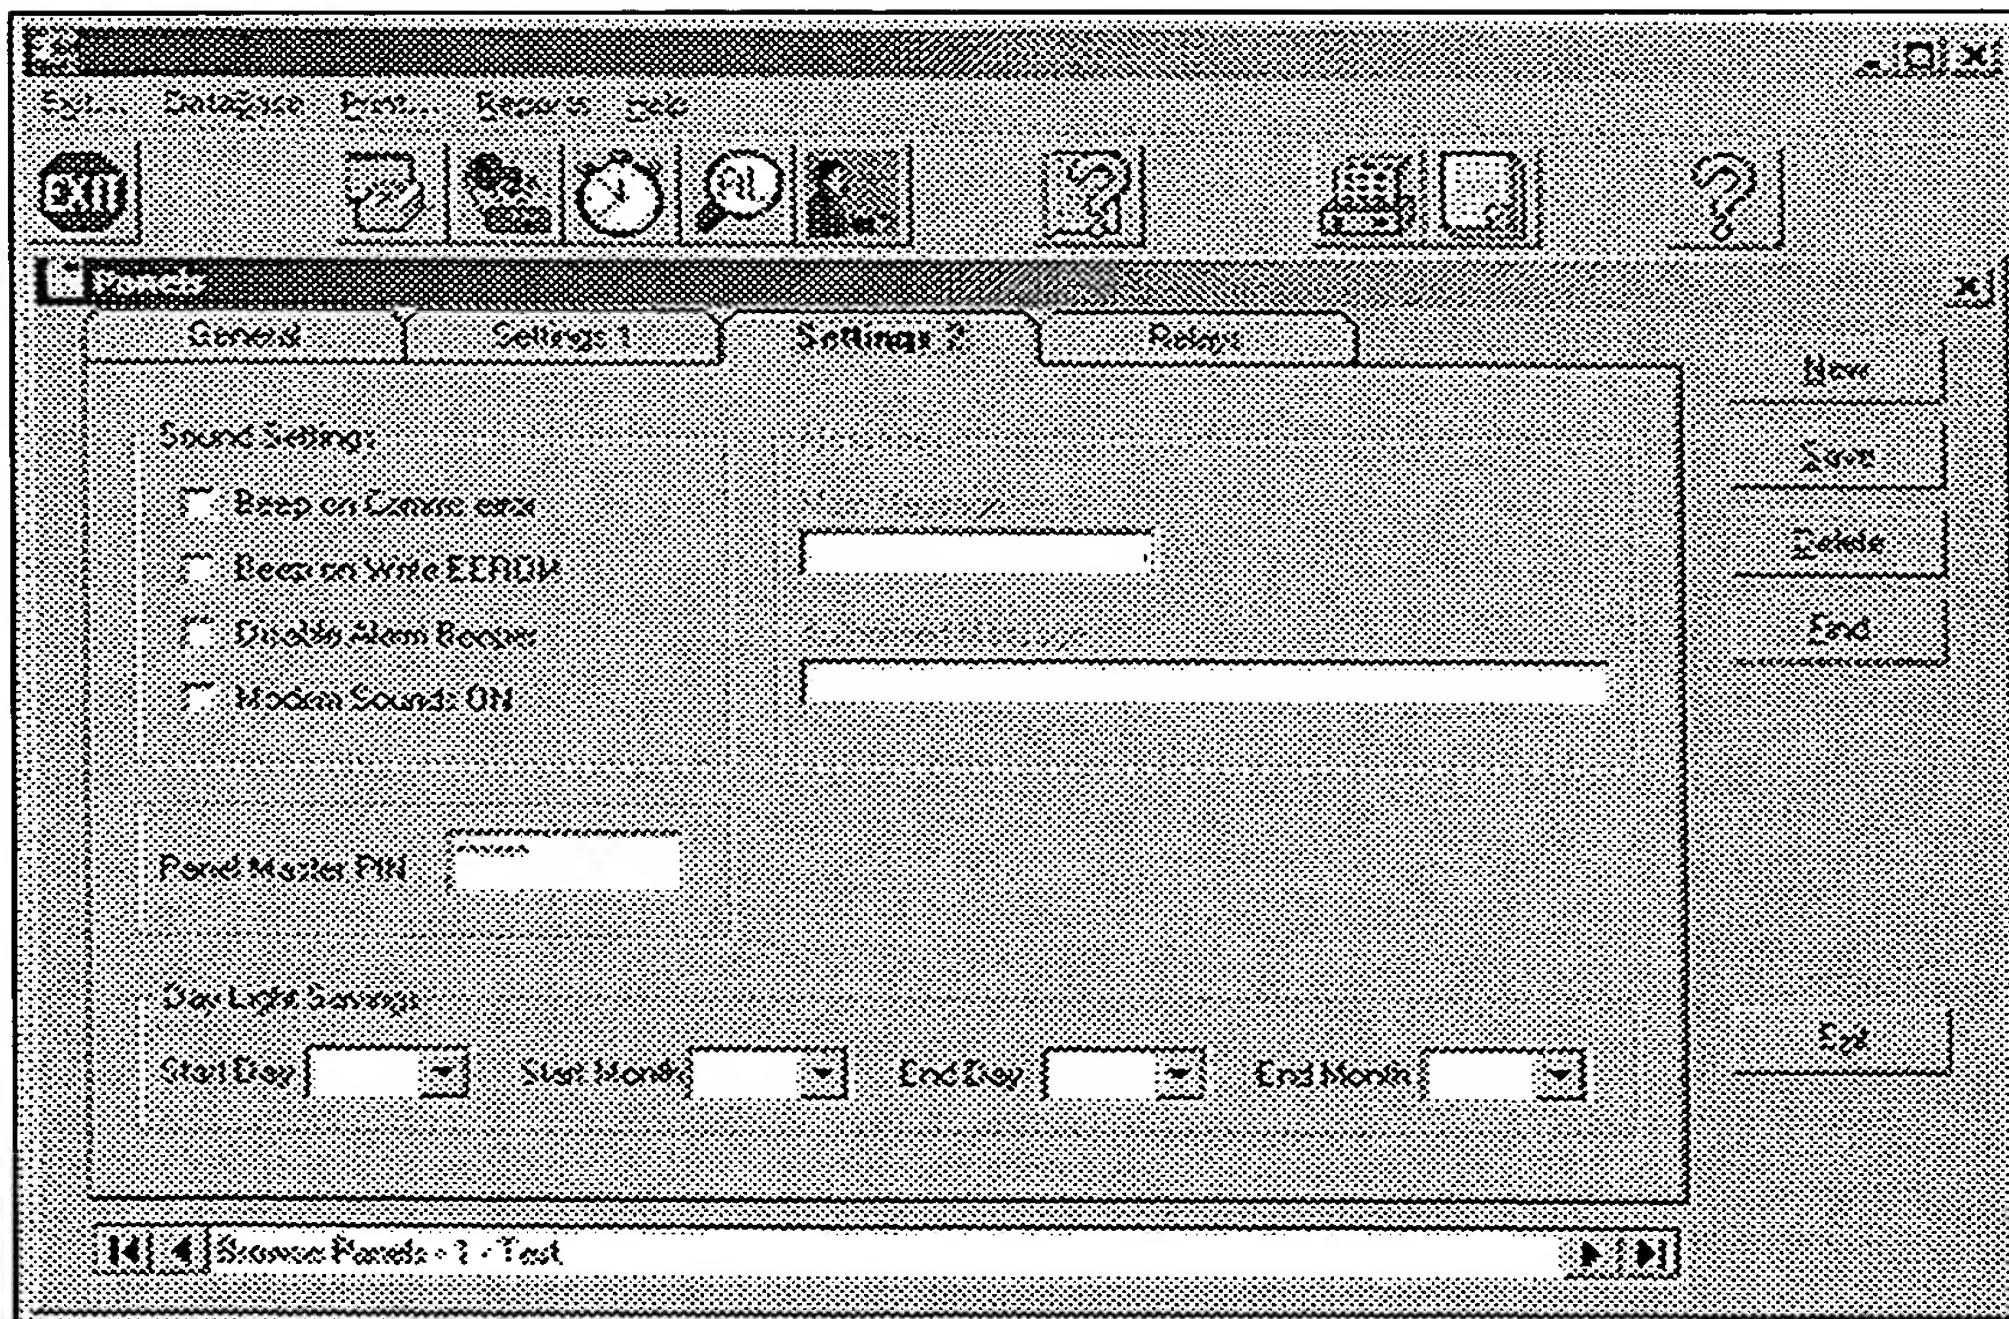


FIG. 9

REPLACEMENT SHEET

10/15

60(4)
↓

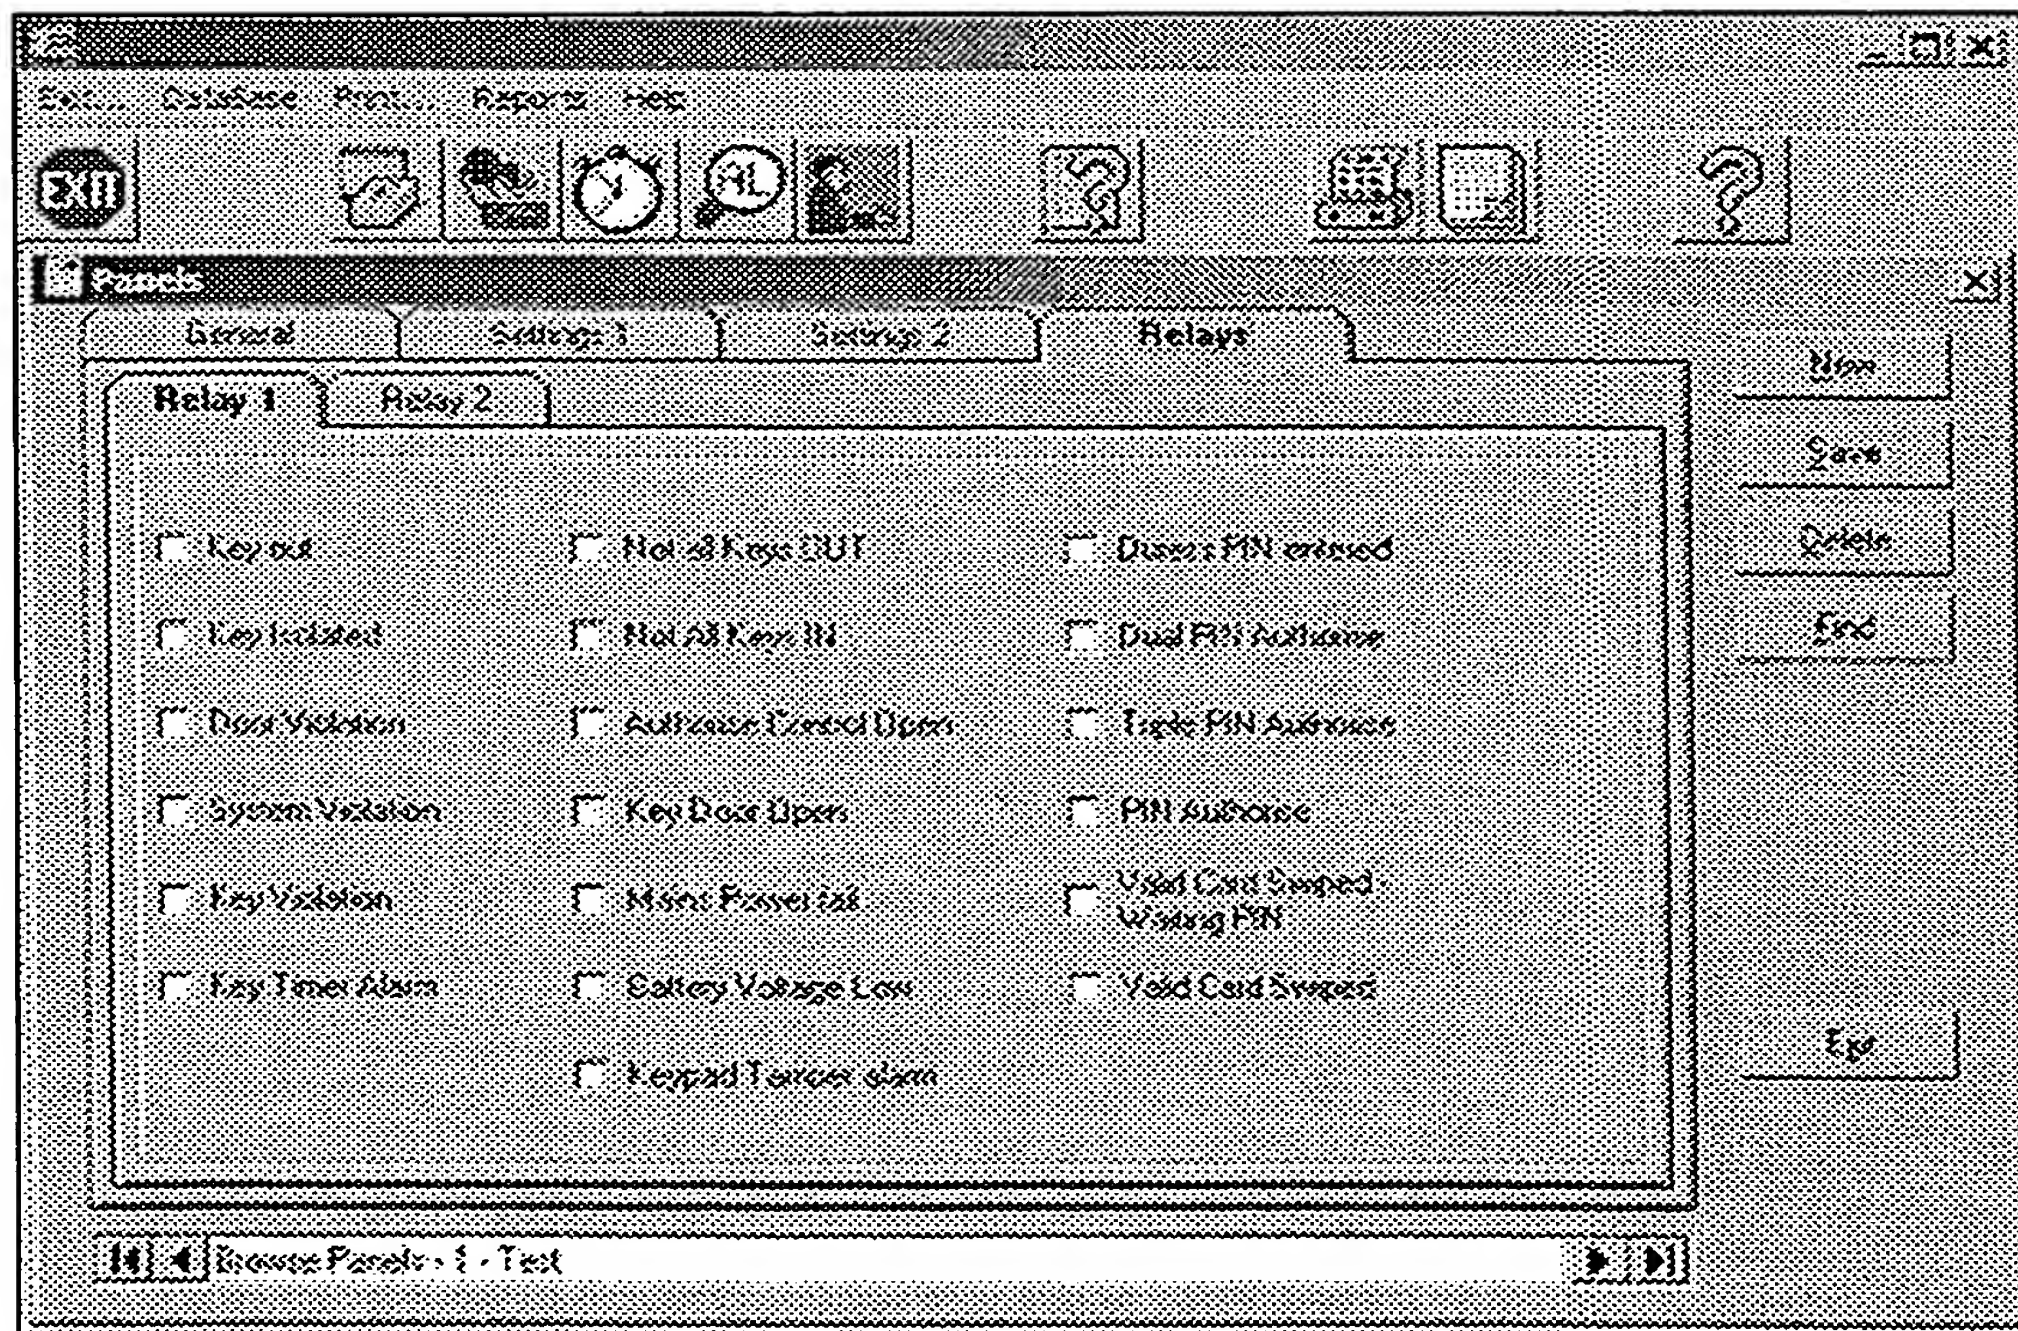


FIG. 10

REPLACEMENT SHEET

13/15

70
↓

The screenshot shows a software window titled "REPLACEMENT SHEET" with a standard Windows-style title bar (minimize, maximize, close buttons). The window contains several input fields and buttons for configuring card reader settings. The layout is organized into three main columns. The first column contains fields for "Start Party Bt", "Start Bt", "End Bt", "Party Type", "Site Number", "Start Bt", "End Bt", "Site Data #", "Other Options", "ASCA/BCLD", and "Show Site". The second column contains fields for "End Party Bt", "Start Bt", "End Bt", "Party Type", "Card Number", "Start Bt", "End Bt", "Card Data Mark", and "ASCA/BCLD". The third column contains a "Card Reader Type" dropdown menu, "OK" and "Cancel" buttons, and a "Help" button (represented by a question mark icon). The "Party Type" and "Card Number" fields have dropdown arrows. The "ASCA/BCLD" field has a small icon next to it. The "Show Site" field has a small icon next to it. The "Card Data Mark" field has a small icon next to it. The "OK" and "Cancel" buttons are located at the bottom right of the window. The "Help" button is located at the top right of the window. The window is labeled with the number 70 and a downward arrow.

| Start Party Bt | End Party Bt | Card Reader Type |
|------------------|------------------|----------------------------------|
| Start Bt: 0 | Start Bt: 0 | Card Reader Type: Cesi Busca V40 |
| End Bt: 0 | End Bt: 0 | |
| Party Type: Even | Party Type: Even | |
| Site Number | Card Number | |
| Start Bt: 2 | Start Bt: 21 | |
| End Bt: 20 | End Bt: 38 | |
| Site Data #: 0 | Card Data Mark | |
| Other Options | ASCA/BCLD | |
| ASCA/BCLD: 0 | ASCA/BCLD: 0 | |
| Show Site: 1 | | |

OK Cancel

FIG. 13